

RF Coaxial Connectors Cable Assembly

2013 RF & Microwave Division
6F-2, No.51, Sec. 1, MinSheng E RD, Taipei, Taiwan (ROC)



MCX-KE



MCX-KE



MCX-J3



MCX-JW3



MCX-KWE

RF Coaxial connector-MCX



MMCX-J1.5



MMCX-JW1.5



MMCX-KE



MMCX-KWE

RF Coaxial connector-MMCX



SMA-J-1.5



SMA-J-3



SMA-JB2



SMA-JW-1.5



SMA-JJ



SMA-J-1.0
for test

RF Coaxial connector-SMA



SMB-J-3



SMB-JW-3



SMB-K-3



SMB-J-1.5



SMB-KW-1.5



SMB-KW-3

RF Coaxial connector-SMB



TNC-J-3



TNC-JW-3



TNC-CY-1.5



TNC for antenna



TNC for antenna

RF Coaxial connector-TNC



BNC-KE



BNC-KY-1.5



BNC-KWE



BNC-K

RF Coaxial connector-BNC



N-JKW



N-J7D



N-JJ



N-K5

RF Coaxial connector-N type



F-J-1.5



F-JW-1.5



F-RG6



F-KW-1.5

RF Coaxial connector-F type



FME-J-1.5



FME-K-1.5



FME-J3

RF Coaxial connector-FME



UHF-KF5




UHF-J-3

RF Coaxial connector-UHF



RF Coaxial connector-TAC

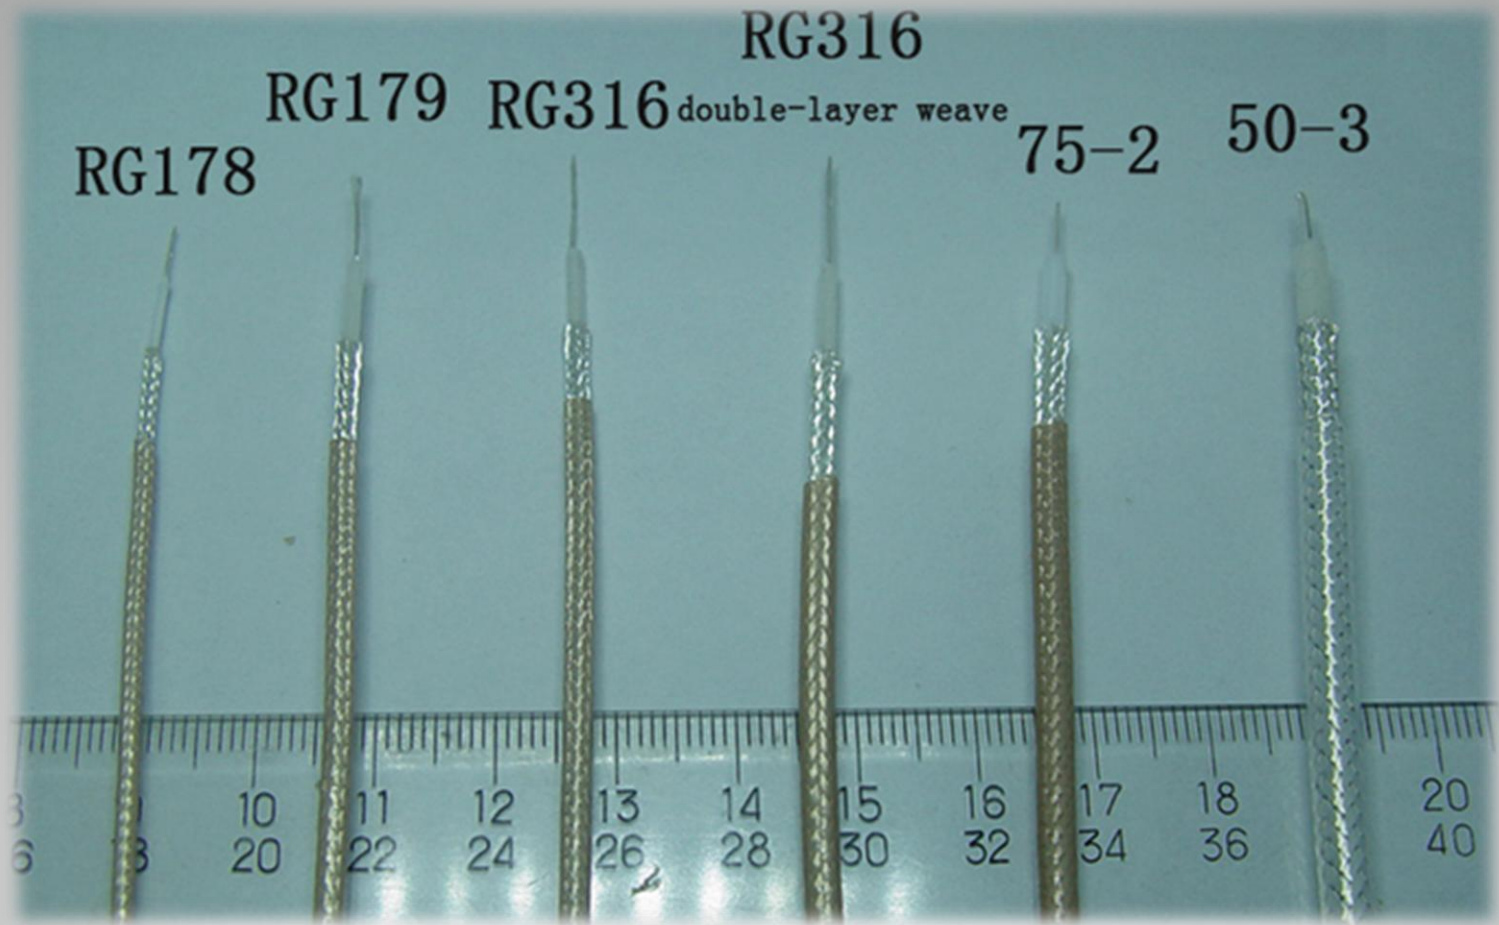

RF Coaxial Cables



BNC for 50-3



FME for RG174



SMA /IPX



N-KF/SMA-JW

Cable Assembly (Jumper)



C2-JW/SMA-K



TEST Connector for Mobile Phone



Antenna



N/SMA-JJ



N/MCX-JK



SMA/MMCX-KK



TAC/BNC-JK

Inter-Type Adapter